

UZIN ATD 100 – WOOD FLOORING ADHESIVE APPLICATION MATERIAL-EFFICIENT, ERGONOMIC AND EFFICIENT.

The ergonomic companion UZIN ATD 100 ensures quick and material saving installation of wood flooring. The UZIN adhesive tubes listed under „to be used with“ are specifically matched for use with UZIN ATD 100.

- **Reduced material consumption**, as there is approximately 89 per cent less packaging waste



- **Ergonomic**, since working in upright position



- **Efficient** application of adhesive



TO BE USED WITH:

UZIN MK 250 (2 x 7,5 kg tubes)
Item No.: 79888
UZIN MK 200 T (2 x 8 kg tubes)
Item No.: 87275
UZIN MK 180 T (2 x 8 kg tubes)
Item No.: 177288
UZIN MK 160 (2 x 6 kg tubes)
Item No.: 86363

PACKAGING CONTENT:


1 x UZIN ATD 100
1 x Charger
2 x Battery packs
1 x Transport box
4 x UZIN ATD Nozzle / 400 mm
1 x UZIN ATD Stand

OPTIONAL ACCESSORIES:

Item no.: 68063 UZIN ATD Nozzle / 190 mm
Item no.: 79866 UZIN ATD Nozzleholder / 190 mm

Item no.: 79868 UZIN ATD Nozzle / 400 mm
Item no.: 79867 UZIN ATD Nozzleholder / 400 mm

Item no.: 79869 UZIN ATD Stand

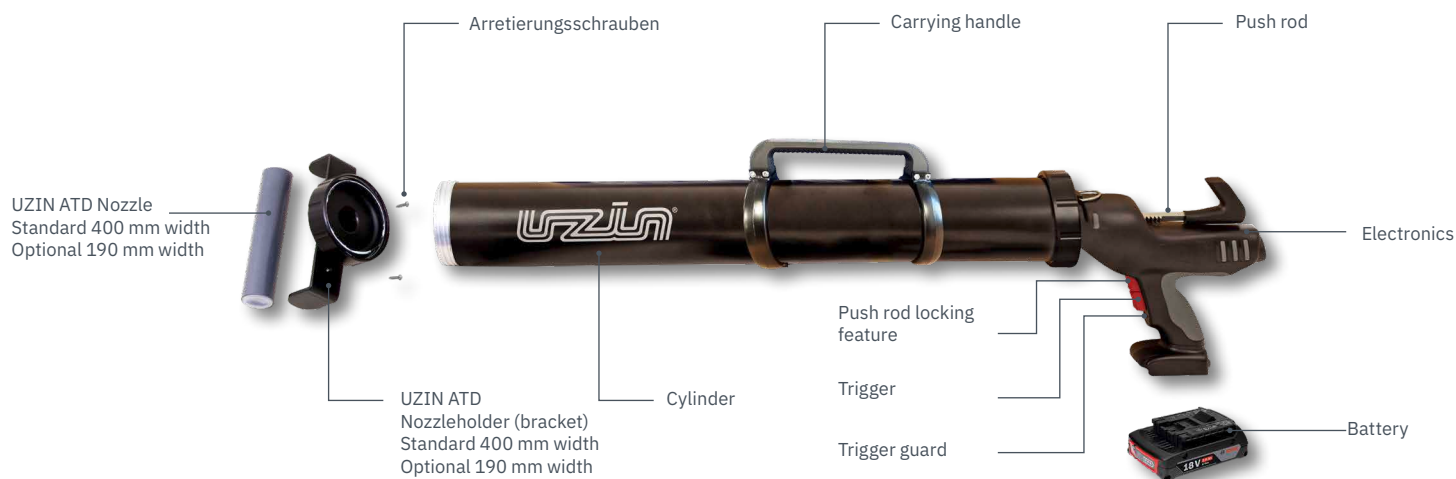

APPLICATION:

Charge the batteries supplied before using the UZIN ATD 100. The use of 2 batteries allows working without interruptions. The second battery can be recharged while the first one is still being used. The machine is therefore always ready for use.

INSERTING AND CHANGING THE TUBE BAGS:

1. Place the UZIN ATD 100 on the transport box.



2. Keep the blue button above the trigger pressed and pull the push rod back to the desired mark.



3. Unscrew the nozzle holder.



4. Allow the adhesive tube bag to slide slowly into the cylinder until it is fully inside the housing.




5. Operate the trigger until the sealing ring protrudes from the machine.



6. Removing the sealing ring.



7. Screw on the nozzle holder.

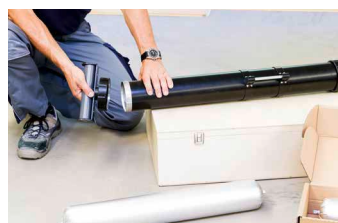

ADHESIVE APPLICATION WITH UZIN ATD 100:

1. The electronics can be used to regulate the speed and thus the pressure on the adhesive tube in 9 levels. Level 1 = slow | Level 9 = very fast. Adjust the level gradually to the working speed. Level 4 - 5 is best suited for quick and clean working.



2. Place the nozzle on the floor and keep the trigger pressed until adhesive escapes from the nozzle. Pull UZIN ATD 100 evenly backwards.



MAINTENANCE:

1. Clean the outside of the nozzle using the UZIN Clean-Box, then follow up by rubbing with a dry cloth.



2. Unscrew the nozzle holder and remove the adhesive tube.



3. Remove the UZIN ATD nozzle by loosening both locking screws at the top of the holder.



4. Remove all adhesive residues from the UZIN ATD 100 using the UZIN Clean-Box.



TIPPS & TRICKS:

- To delay the adhesive in the UZIN ATD nozzle from curing during extended idle periods of the UZIN ATD 100, cover the nozzle orifices with UZIN Alutape 75 or equivalent.
- If the UZIN ATD nozzle is still filled with adhesive after removing it, cover all openings with the UZIN Alutape 75 or adhesive tape equivalent.
- Cleaning after use is easier if you rub the inside of the piston and the closure with silicon spray and a micro-fibre cloth.
- By drilling out the centre nozzle orifice, the UZIN floorboard notching can be imitated.
- For time-saving replacement of the tube bags, follow the steps mentioned in point 5 "INSERTING AND CHANGING THE TUBE BAGS" and then mark the push rod (with a waterproof permanent marker) at the height it enters the housing.
- By drilling out the centre nozzle orifice, the UZIN floorboard notching can be imitated.
- We recommend cleaning the thread on the tube of the UZIN ATD 100 as well as the cap on the nozzle holder with wipes from the UZIN Clean-Box every time you change the tubes.

SERVICEPARTNER:

Innotech Marketing und Konfektion Rot GmbH
Schönbornstr. 8b
D-69242 Rettigheim
Telefon +49 (0)7253 - 98 88 55 30
Fax +49 (0)7253 - 98737 29
Mail: service@innotech-rot.de

Diese Angaben beruhen auf unseren Erfahrungen und sorgfältigen Untersuchungen. Die Vielfalt der mitverwendeten Materialien sowie die unterschiedlichen Baustellen- und Verarbeitungsbedingungen können von uns jedoch nicht im einzelnen überprüft oder beeinflusst werden. Die Qualität Ihrer Arbeit hängt deshalb von der fachmännischen Baustellenbeurteilung und Produktverwendung durch Sie ab. Im Zweifelsfall Eigenversuche durchführen oder anwendungstechnische Beratung einholen. Die Verlegerichtlinien der Belagshersteller sind zu beachten. Mit dem Erscheinen dieser Bedienungsanleitung verlieren alle vorausgegangenen Bedienungsanleitung ihre Gültigkeit. Die jeweils aktuelle Fassung dieser Bedienungsanleitung finden Sie auf unserer Homepage unter www.uzin.de.

UZIN | A brand of Uzin Utz Group

DE + AT | Uzin Utz SE | Dieselstraße 3 | 89079 Ulm
Telefon +49 731 4097-0 | Telefax +49 731 4097-110 | E-Mail info@uzin.de | Internet www.uzin.de

CH | Uzin Utz Schweiz AG | Ennetbürgerstrasse 47 | 6374 Buochs
Telefon +41 41 6 24 48 88 | Telefax +41 41 6 24 48 89 | E-Mail uzin.ch@uzin-utz.com | Internet www.uzin.ch