

APPLICATOR U-TACK / BULLRAN


Application equipment for the rapid application of U-Tack and Bullran to looped carpet backing

MAIN APPLICATION FIELD:

- for applying U-Tack and Bullran to the back of the carpet



- sturdy design (professional quality)

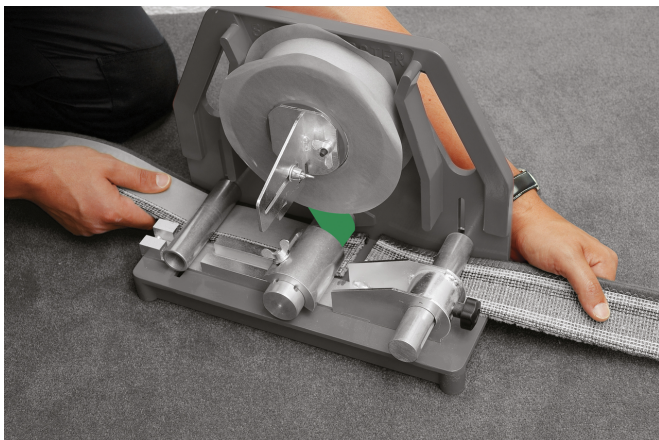

APPLICATION:



1. Insert U-Tack or Bullran into the roll holder.



2. Insert the carpet strip into the feed mechanism.



3. Place the U-Tack or Bullran onto the carpet strip with the adhesive side facing the pressure roller.



4. Pull the carpet strip and the adhesive tape (U-Tack or Bullran) together through the pressure roller.



5. Pull the carpet strip with the adhesive tape until the carpet strip or adhesive tape runs out. Feed in either a new carpet strip or new adhesive tape as described in steps 1 and 2.